REAR FLOOR SIDE REAR MEMBER (ASSY)

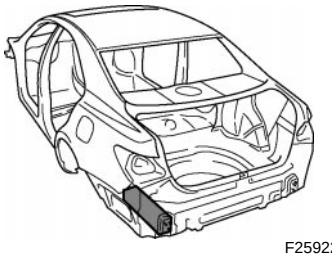

F25922A

With the rear floor No.3 crossmember removed.

Symbol meaning

REMOVAL	▲ ▲ : Remove Weld Points
INSTALLATION	● ■ : MIG Plug Weld

F25922B

REMOVAL·INSTALLATION

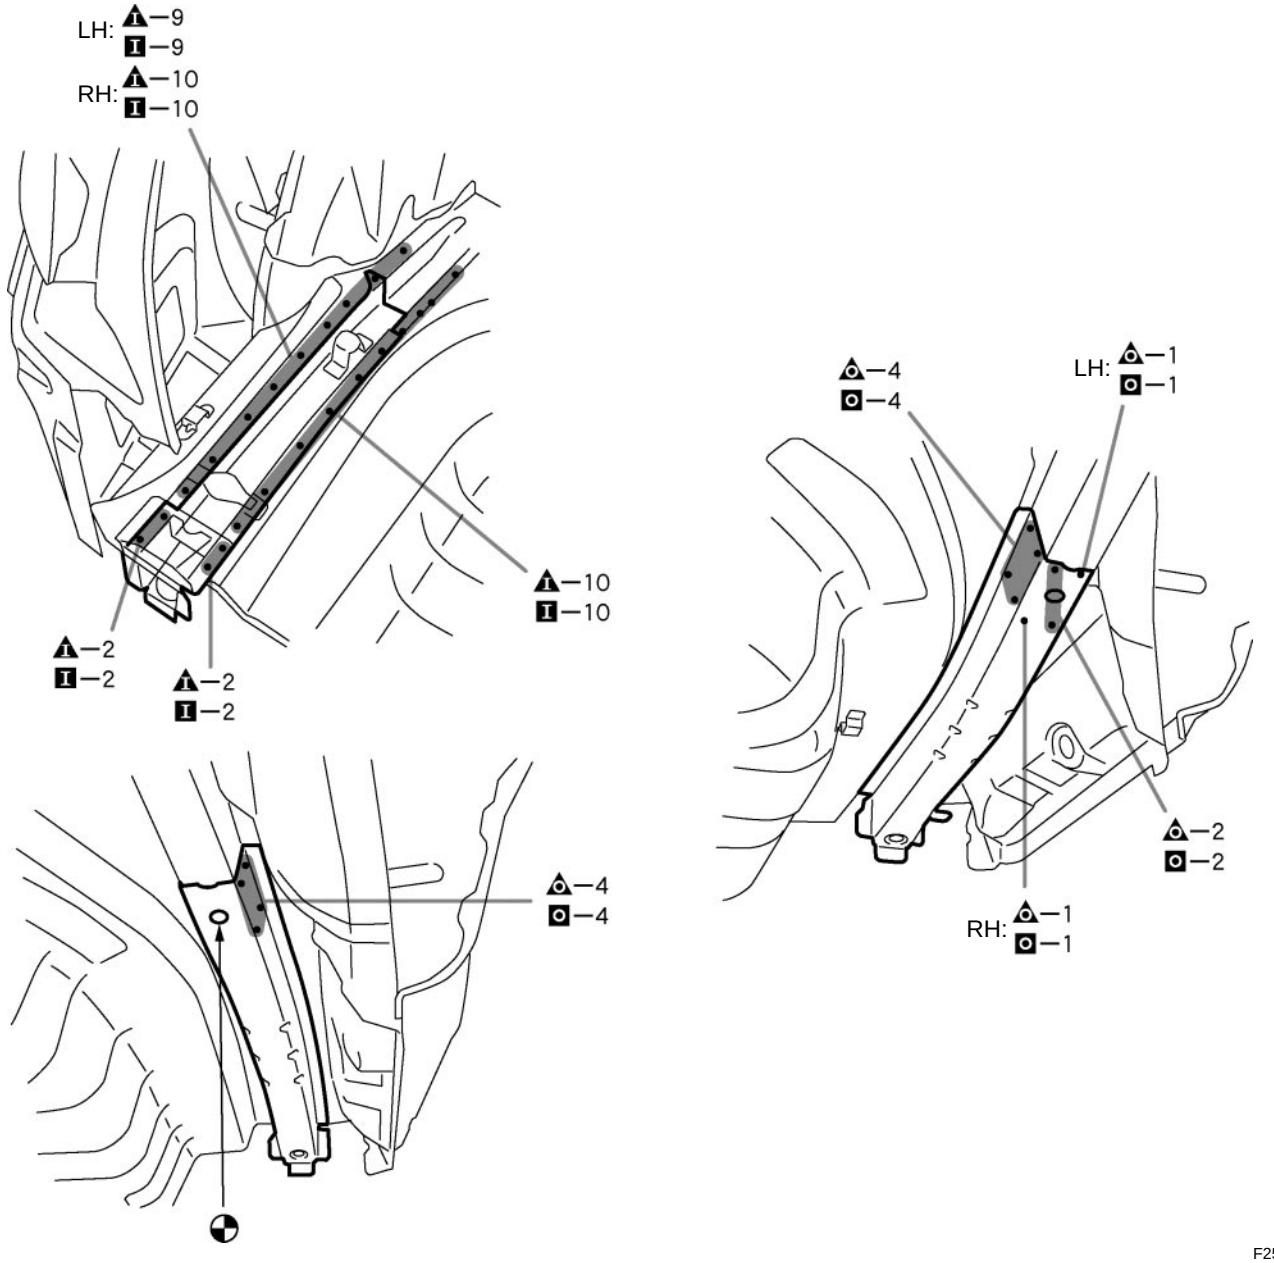

F25922

INSTALLATION POINT

1 Temporarily install the new parts and measure each part of the new parts in accordance with the body dimension diagram. (See the body dimension diagram)
2 After welding, apply undercoating to the corresponding parts. (See the paint·coating)
3 After applying the top coat, apply anti-rust agent to the internal panel portion of the closed section structural weld points.